

The setup menu enables the user to access the more advanced settings of the DAC212. Use the supplied remotecontrol to navigate through the parameters and sub-parameters to change the settings.



press and hold the "mute" button for 3 seconds to enter the setup menu

Setup




use the volume up/down buttons to navigate through the parameters and sub parameters items as well as options



to select an item press the "source" button
to leave the sub parameters select "back"
to leave the setup menu select "exit"

Back
Exit

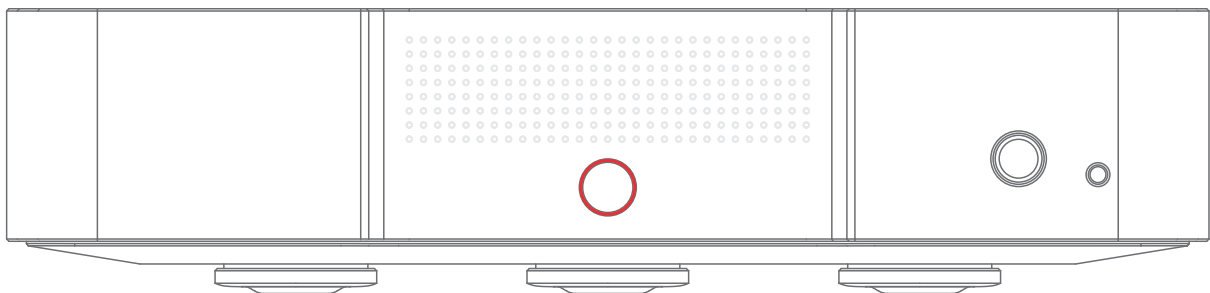

Setup

settings menu

Displ

display settings

1 .. 10 .. 16

display brightness

Off .. On

auto dim function

5sec .. 30sec .. 90.. Off

display auto off

src .. Vol

main view

Back

back to settings

Outp

output settings

Bal Unbal

XLR format

0dB 6dB

Output Gain

DAC Singl Multi

Volume mode

Off -60dB -30dB

startup volume level

Off .. -3db .. -10dB

maximum volume level

Mute .. 6dB .. 30dB

mute button function

Back

back to settings

HpH

headphones settings

0dB 6dB

headphone gain

Singl Multi

Hp volume mode

Off -60dB .. -30dB - 0dB

startup volume level

Off -60dB .. -30dB - 0dB

Maximum Hp Volume level

Back

back to settings

Input

Input settings

Last .. Coax1 .. Opt .. USB

Startup source

DBLM .. DLBM

HDMI I2S config

Back

back to settings

DAC

DAC chip settings

16bit .. 32bit

serial data mode

On Off

jitter reduction

Bypas 32 44.1 48

de-emphasis filter

Off Lowst .. Hgst

dpl bandwidth

Norm1 50k 60k 70k

source IIR bandwidth

Slow Fast

FIR rolloff speed

On Bypas

oversampling filter

6 7 8 9

quantizer

Back

back to settings

BT

bluetooth settings

Off Stdby On

power mode

Off 60dB 40dB 20dB

volume range

SPP Data

bluetooth mode

Off On

Blue LED

Back

back to settings

Misc

miscellaneous settings

1.15

firmware version

1.14

hardware version

DiDiT RS232

Link Mode

Cent. Fahr.

temperature unit

Stdby On Last

power mode

Sure Realy Init

factory reset

Back

back to settings

Exit

exit settings